


SECTION B -PARTS PREPARATION-

HOSE TRIMMING INSTRUCTIONS


The two lower radiator hoses must be modified to fit. After checking fit, cut and trim the hoses as shown.

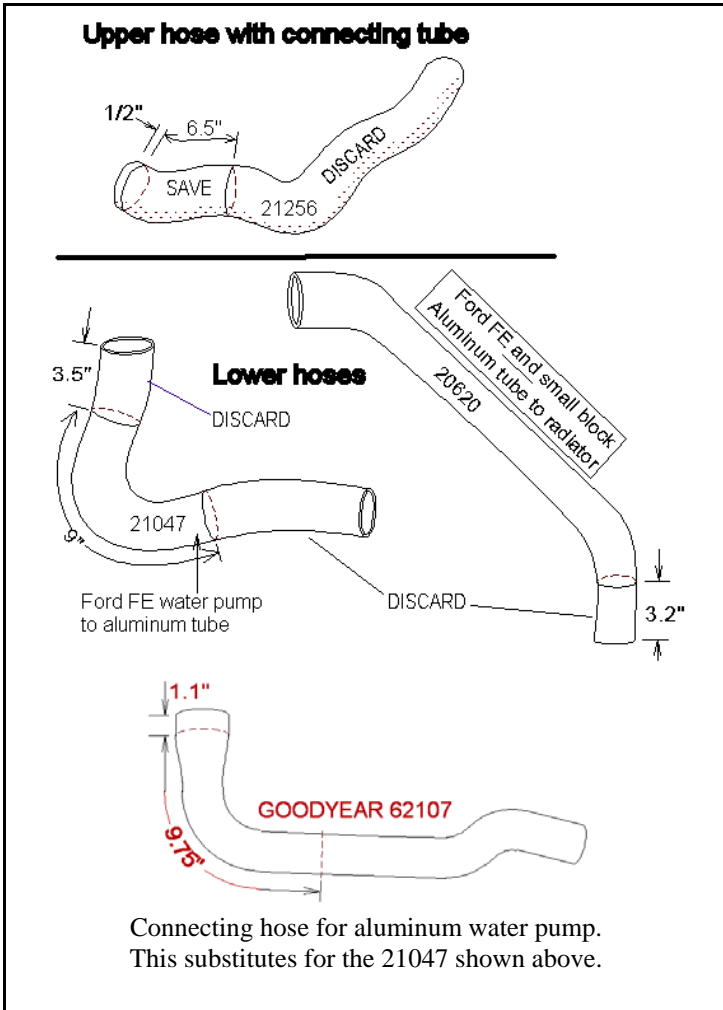

SMALL BLOCK FORD


Use the center portion from the radiator to the lower connecting tube. (You must tell us that you're using a small block when you order.)

Upper hose

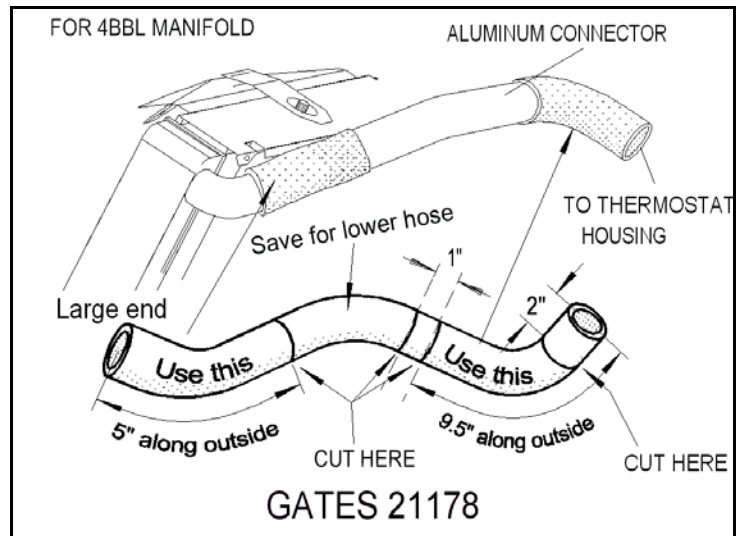

The long leg of the aluminum connecting tube goes toward the radiator.

Lower Hose, Ford small block

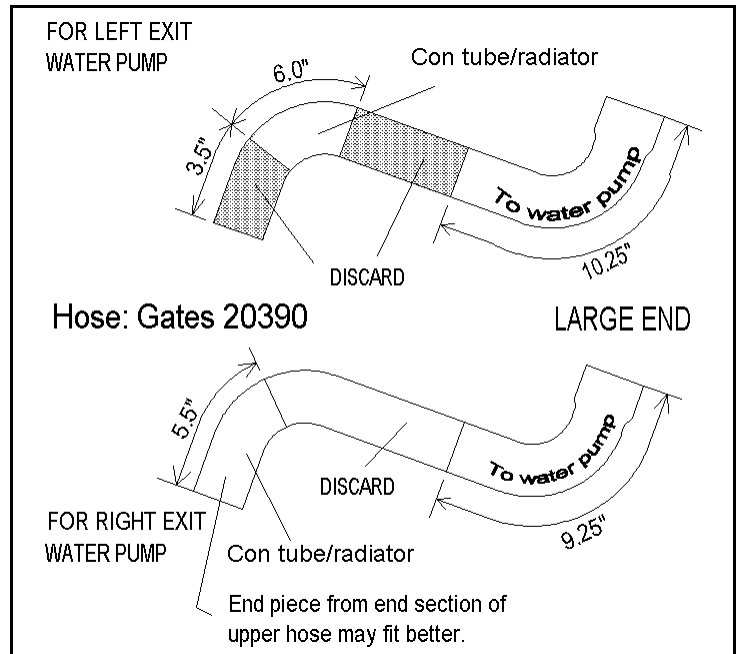

429/460 FORD

Lower hoses are the same as the FE Ford. You must use an in-line filler cap (i.e. Moroso) or an expansion tank. If you are using an in-line filler only, you must use an overflow system that replenishes the system automatically.

Pad the "X" member if the upper hose touches it.