


Run the stripe onto the edge of the hood but not underneath.



Paint defroster vents the same as the body.

On hood and trunk openings run stripe over edge but do not continue onto flat.

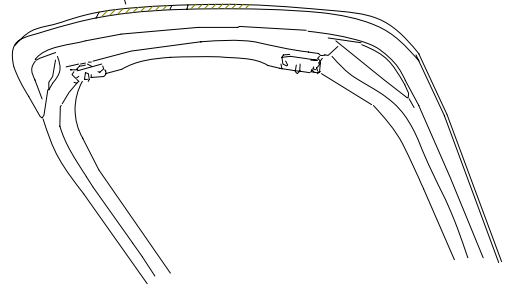